

## AccuVent Standard and High Energy

(PN: ACBP11739, ACBP11754, ACBP18415, ACBP18429)

### **Step 1:**

Staple “Staple Here” flange to face of top plate.



### **Step 2:**

Push against top plate, may want to secure back edge with staples.



### **Step 3:**

Fully secure the ventilation baffle to the roof decking.




## AccuBlock (Unventilated Attic)

(PN: ACBP18600, ACBP18601)


### **Step 1:**

Staple “Staple Here” flange to face of top plate.

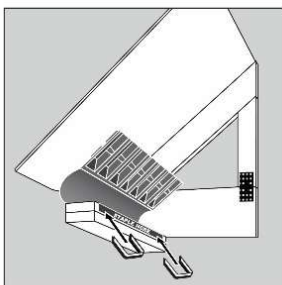

### **Step 2:**

Push bottom against top of top plate, may want to secure back edge with staples.

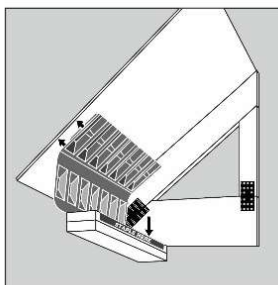

### **Step 3:**

Staple the ventilation baffle to the roof decking. Spray foam directly on the AccuVent ensuring the end is closed off.

